


Density functions

Specifications:


1) Use Density Measurement Tool (Optional parts) to measuring the density by steeping in liquid.

- 2) Directly Read density, less cumbersome calculation.
- 3) Measure density of solid and liquid.

Density measurement device installation steps:

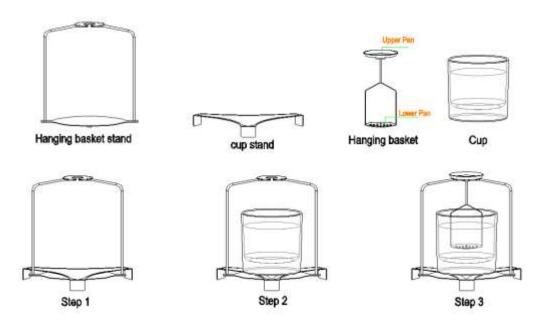

When weighing in air, place the sample on the upper pan of the hanging basket.

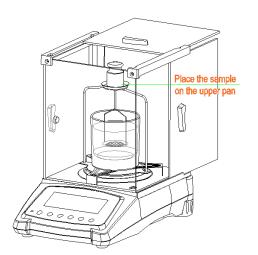



When weighing in medium, place the sample on the lower pan. Full set of density measure is necessary to realize this function.

1.Click <mark>Density</mark> , the display will show					
2019-07-30 15: 36: 12 Max=1200 g 0.00 g					
MENU	-0-	• T •	PRINT		

3.Input medium liquid density then click \checkmark

.(Example 1.000000g/cm³)

RhoFI	01.000000 p/cm ³		~
1	2	3	
4	5	6	-
7	8	9	0
			U

5. Place sample on the upper square platform of density measure.

2.Click g/cm ³ , the display will show					
RhoFl	00.000	000 gem ²	~		
1	2	3	+		
4	5	6			
7	8	9	0		
0			U		

-

4. Remove the tare weight of the scale in the next display and make the scale return to zero, then click **START**








TPS KIT Density

6.To check its weight in the air, click **11**.Immerse

your sample on the structure in the liquid beaker, the display will show

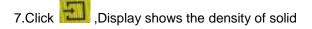

sample.





8. Remove the weight then click **END** to exit the Percentage function, and it will display

